BREAK-IN INSTRUCTIONS

TRANSMISSION: Fill with 0.6 litre (0.16 US. gal.) of good quality motor oil, SAE #30 in summer and SAE #20 in winter. Check oil level periodically.

FUEL MIXTURE: In a SEPARATE CLEAN CONTAINER thoroughly mix 1 pint of 2-cycle oil in 1.9/10 gallons of regular gas. This is a 15 to 1 break-in ratio.

damage and void warranty.

SPARK PLUG: Remove and clean spark plug at end of break-in period. SEE INSTRUCTION BOOK FOR BREAK-IN AND OPERATING INSTRUCTIONS

BREAK-IN SPEED: During the first 250 miles of operation, DO NOT EXCEED 25 M.P.H. in high gear. Higher speeds will cause engine